# **INSTALLATION AND OPERATION** INSTRUCTIONS



# Anti-burglary device

# RÄBER, technische Geräte, CH-6024 Hildisrieden Tel. 041 461 00 80, Fax 041 461 00 82, Email praeber@gmx.ch

For smaller windows, one Anti-Burglary Device is sufficient. The Device is mounted close to the window handle, so that the window can be unlatched and opened with one hand.



For larger windows, two Anti-Burglary Devices should be installed; one at the top of the window frame and one at the bottom.

Before installation, confirm that the mounting screws supplied with the unit are suitable for vour window frame. In particu-

lar, confirm that your window frame does not contain any metal reinforcement, which could make the insertion of a self-tapping screw impossible.

Attention: In order that the latch mechanism should operate correctly, ensure that the mounting plate and the angle are mounted absolutely parallel to the window frame and normal to the line of the window hinge.

# Intended usage

- Latching closed of a window or door.
- Generation of an alarm if it is attempted to force the window or door open.
- Usage for tasks other than the above is not approved.

## Attention! Read these instructions!

Please read these Operating Instructions carefully. In the event of damage to the unit or other items resulting from inattention to the Operating Instructions the unit guarantee will not be valid. and the manufacturer will bear no responsibility.

## Description of operation

The Anti-Burglary Device consists of two elements; the Latch and the Alarm. In the event of an attempted burglary excess force will be placed on the latch. This will trigger the alarm. In addition, the robust construction of the latch will greatly increase the force required to break in. The alarm will be automatically switched off approximately 30 seconds after the attempt to force the latch has ceased.

2

1. The mounting plate is to be mounted 5 mm from the window casement. The supplied spacers (between 1 and 4 mm) are used to ensure the correct distance of the mounting plate from the

window frame.

- Ensure that the mounting holes do not conflict with any screws, hinges, etc. already in the window frame.
- 2. Drill the mounting holes: 4 mm x. approx. 30 mm deep.
- 3. Attach the mounting plate using the screws supplied. Ensure that the required spacer(s) see (\*) below - are fitted.
- 4. Position the angle on the window casement and drill the mounting holes: 1.5 mm x approx. 10 mm deep.
- 5. Attach the angle using the screws supplied. Ensure that the required spacer(s) - see (\*) below - are fitted.
- 6. Install the battery and the device housing / alarm generator onto the corresponding slots 6

## Security notice

Before leaving your house or appartment, it is recommended that the window is locked manually. Along with the Anti-Burglary Device, this will provide a double level of security.

Check regularly (typically, every 8 - 10 weeks) that the device's battery retains sufficient charge

#### **Device contents**

- Mounting plate with latch
- Angle piece
- Spacers; 1, 2 and 4 mm
- Housing, with alarm generator
- 2 screws, 2.5x16
- 2 hexagonal bolts, M6x40

#### **Required tools**

- Drilling template. (Attached to these Instructions)
- Adhesive tape (for the attachment of the drilling template)

3

- Drills, 1.5 and 4.0 mm
- Cross-headed screwdriver. Size 1
- Hexagonal socket, Size 10.

on the mounting plate. The housing should click into place.

7. Adjust the sensitivity of the alarm generator, so that a powerful force on the window frame will trigger the alarm.

The contract screw on the alarm generator is turned anti-clockwise to decrease the force reguired to trigger the alarm, and clockwise to increase the trigger force.

\*Spacers: The Anti-Burglary Device is designed for a 17mm-thick window casement.

If your casement is thinner than 17 mm, the spacers are inserted under the angle to align it with the mounting plate, and thereby ensure that the mechanism latches correctly.

If your casement is thicker than 17 mm, the spacers are inserted under the mounting plate.


#### Function check (Battery check)

Press the housing and the latch until the alarm is triggered. (Note that, besides checking the operation of the device, this check also conforms that the battery is not empty.)

7

# 1. Housing, with alarm 2 generator 2. Slider 3. Mounting plate

Installation

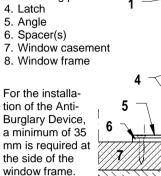

mind: 35 mm

#### Operation

To open the window, press the latch inwards (i.e. away from the window frame.)

To disable the device, press the Wedge besides the latch inwards (i.e. away from the window frame.) The wedge will hold the latch open.

When the latch function is required again, push the wedge back to its original position.

#### Guarantee

We will rectify any defects attributable to either material or manufacturing deficiencies that are reported within the Warranty Period of 12 months. Defects that are the result of unapproved use or treatment of the device cannot be covered by warranty.

The guarantee does not include secondary damage resulting from a fault in the device.

## Accessories

The alarm generator requires a 9V battery. It is recommended that an alkali battery is used for this purpose. These batteries have a very low discharge rate and can therefore, when not in regular use, be installed for 5 to 10 years before they require replacement.



Kantaktechnaube

8

